

Instruction Manual

Thank you for your purchase of SEA&SEA product. For proper operation of the product and safe handling, please read the following instructions carefully before use. This manual should be retained for future reference.

Safety Precautions

* Failure to heed the precautions listed below could result in serious consequences. To prevent injury or damage to yourself and/or others, please observe the precautions as they contain highly important information related to personal and product safety.

⚠ CAUTION : Situations that could result in property damage or personal injury.

CAUTION

- Read the instruction manual and observe proper precautions before use of this product.
- Unauthorized disassembling and/or modification could result in malfunction or flooding, and void product warranty. Take the product to a SEA&SEA authorized service center for repair or inspection.
- Avoid strong shocks/impacts or excess stress to prevent malfunction, damage or breakdown. Make sure that the product has been securely mounted to other products in order to prevent injury, fall or missing.
- Do not carry the camera or housing by holding the accessories such as arm, cable, strobe, etc. Heavy components may fall and cause damage or injury.
- Do not leave the product in places with hot temperatures such as inside of a car or in a car trunk in summer. The heat may deform plastic parts of the product.
- Do not store the product in wet or high humidity place, to avoid mold, rust, corrosion or malfunction.
- SEA&SEA SUNPAK Co., Ltd. assumes no liability for compensation of loss of captured images or expenses caused by loss of images, even if you are unable to shoot due to a product defect or malfunction.
- SEA&SEA SUNPAK Co., Ltd. will not be responsible for the replacement or compensation for cameras, lenses or those accessories damaged due to your invalid operation.
- SEA&SEA SUNPAK Co., Ltd. assumes no liability for errors or discrepancies in this manual.
- Specifications and appearance are subject to change without notice.

Maintenance and Storage

 
- Never use chemicals, cosmetics, any petroleum solvents such as paint thinner, or neutral detergent on the product. They may deform and damage the product.
- After each use in salt water, make sure it's watertight, then soak it sufficiently in fresh water.
- Insufficient soaking causes damage by salt to the product. Salty residue may be left on the product where it will crystallize as it evaporates. Crystallized salt is hard to dissolve and difficult to be removed once formed, and it will result in water leakage.
- After rinsing, dry the product well with a soft dry cloth, then let the product dry in the shade, out of direct sunlight.
- Do not dry the product by heating (using a hair dryer, for example). Heating can deform and damage the product.
- If you will not use the product for an extended period of time, store it away from high temperatures, high humidity, direct sunlight, or extreme cold.
- Do not store the product with naphthalene or camphor mothballs, or in locations such as a laboratory where chemicals are used. This environment can cause mold, rust, corrosion or malfunction.

Function


This product allows you to take stress-free macro photos (camera-to-subject distance: approx. 3-30cm) by reducing vignetting caused by the shadow of the DX-1G housing in the captured images using only the camera's built-in flash.

How to Use

1. Put the strap of the macro diffuser through the DX-1G housing as shown.

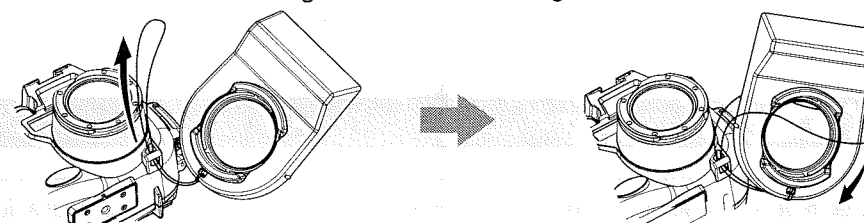


 2. Align the salient on the upper surface of the housing lens and the mark on the macro diffuser, then impose the macro diffuser to the housing. Turn the macro diffuser clockwise until it clicks.

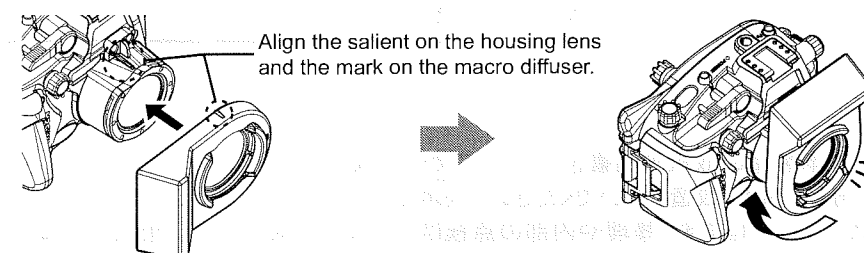


CAUTION

 
- Be careful not to trap your finger(s) between the housing grip and the macro diffuser when attaching and detaching the diffuser.

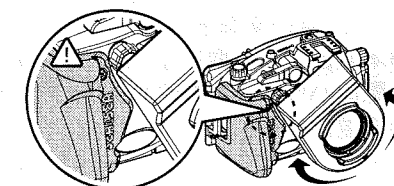

 - Before installing the 1G camera to the housing, slide the Flash OPEN switch of the camera to the outside to raise the flash cover and open the flash. Since the built-in flash for the 1G camera does not fire if the flash cover is not opened, this product will produce no effect.

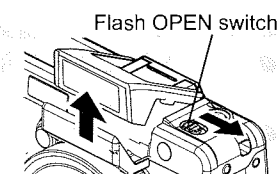

 - Opening the built-in flashlight diffuser inside the flash window of the DX-1G housing by turning the diffuser dial backwards is highly recommended. This will allow you to take superior photos by avoiding dispersal of the light from the built-in flash of the 1G camera. If the images come out underexposed, set the exposure level of the 1G camera higher (+).

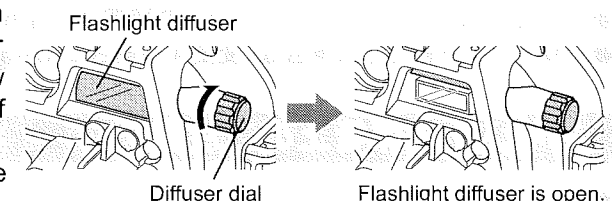

Specifications

【Construction】	Polycarbonate resin
【Dimensions】	Approx. 81 × 112 × 28mm / 3.2 × 4.5 × 1.1inch (W × H × D)
【Weight】	Approx. 38g / 1.3oz
【Accessories】	Strap, Instruction manual (this manual)

* Specifications and appearance are subject to change without notice.

SEA&SEA SEA&SEA SUNPAK Co., Ltd.

3-2-20 Saiwaicho, Kawaguchi-shi, Saitama, 332-0016 Japan TEL.048-256-2251 <http://www.seaandsea.jp>
World Customer Service Center TEL. +81-48-255-8512