



DX-1G Basic User Setup

Fully charge and insert Li-Ion battery (included with camera), insert 4GB or smaller SD or SDHC memory card.

Please note that the following setup options are recommended for underwater camera use. Land shooting may require user to change some settings.

Please consult user manual for additional camera features and specifications.

Turn camera power on, press Menu button and toggle right to SETUP.

I. SETUP

<u>Card Format</u>	SD card format Caution: do this only to erase the card
<u>In Format</u> memory	Internal memory format Caution: this will erase the Internal
<u>LCD Brightness</u>	Set to brightest setting, press OK . Screen shows actual
	change.
<u>ISO Auto High</u>	Set to AUTO 400.
<u>Auto Power Off</u>	Set to OFF or as preferred
<u>Beep Sound</u>	Set to Shutter
<u>LCD Confirm</u>	Set to 3 sec.
<u>Adj. Button Setting</u>	This allows for ADJ quick settings to be set
	1. ADJ Lever 1 – Set to EXPO. CMP
	2. ADJ Lever 2 – Set to ISO
	3. ADJ Lever 3 – Set to WHT BAL
	4. ADJ Lever 4 – Set to QUALITY
<u>Adj. Shutter Button</u>	Off
<u>Functn. Btn. Set</u>	Off
<u>AF Aux Light</u>	Off
<u>RAW/JPEG Setting</u>	Fine
<u>Digital Zoom Image</u>	Normal
<u>Sequential number</u>	On
<u>USB Connection</u>	Mass Storage
<u>Date settings</u>	set date, time and format
<u>Video Out</u>	NTSC



Enter Shooting Settings by pressing Menu

II. SHTG STGS (Shooting Settings)

<u>Pic Quality/Size</u>	Choose F 3648 (10M) for jpg or RAW (10M) for RAW file
<u>Focus</u>	Spot AF
<u>AE Metering</u>	Multi
<u>Cont. Mode</u>	Off
<u>IMG Set</u>	Normal or as preferred
<u>Auto Bracket</u>	Off
<u>Image w/Sound</u>	Off
<u>Date Imprint</u>	Off
<u>Exposure Comp</u>	0.00
<u>White Balance</u>	Cloudy
<u>ISO Setting</u>	100 for u/w with strobe
<u>Camera Shake</u>	Off

*Make sure camera flash is set to the lightning bolt icon for underwater strobe use.

The DX-1G **does have a pre-flash and strobes should be set on Mode "2" or comparable pre-flash setting. Please consult the strobe user manual for further instructions.

***Macro setting shuts off when Review mode is used (not quick review). Remember to push the macro button after going into review mode

Additional Recommendations:

Batteries:

1. Rechargeable Li-Ion Ricoh DB-60 battery is included, additional batteries are available from SEA&SEA Retailers (Part #DX-1G BATTERY)
2. Rechargeable AA Ni-MH batteries 2300 mA or higher recommended for external strobe.

Memory Card:

1. 4GB or smaller Secure Digital (SD) or SDHC card from major manufacturer such as SanDisk, Lexmark or others.

Please consult <http://www.seaandsea.jp/dx1g/index.html> for additional setup and product information.

Tabata USA, Inc.

www.tusa.com • www.seaandsea.com